



# INSTALLATION INSTRUCTIONS

AIVR A320 SOPs Trainer Software

Pico 4 Ultra

## 1 Device Setup — Enable Developer Mode

Before using the A320 training software, complete the following steps if you need to manually install or update the program.

### 1 Open Settings

Put on the headset and select "Settings" (gear icon) in the navigation bar at the bottom of the main screen.




### 2 Go to About

In Settings, navigate to General → About on the left menu.




### 3 | Unlock Developer Mode

Locate "Software Version" on the right. Tap it 7–10 times rapidly with the controller.

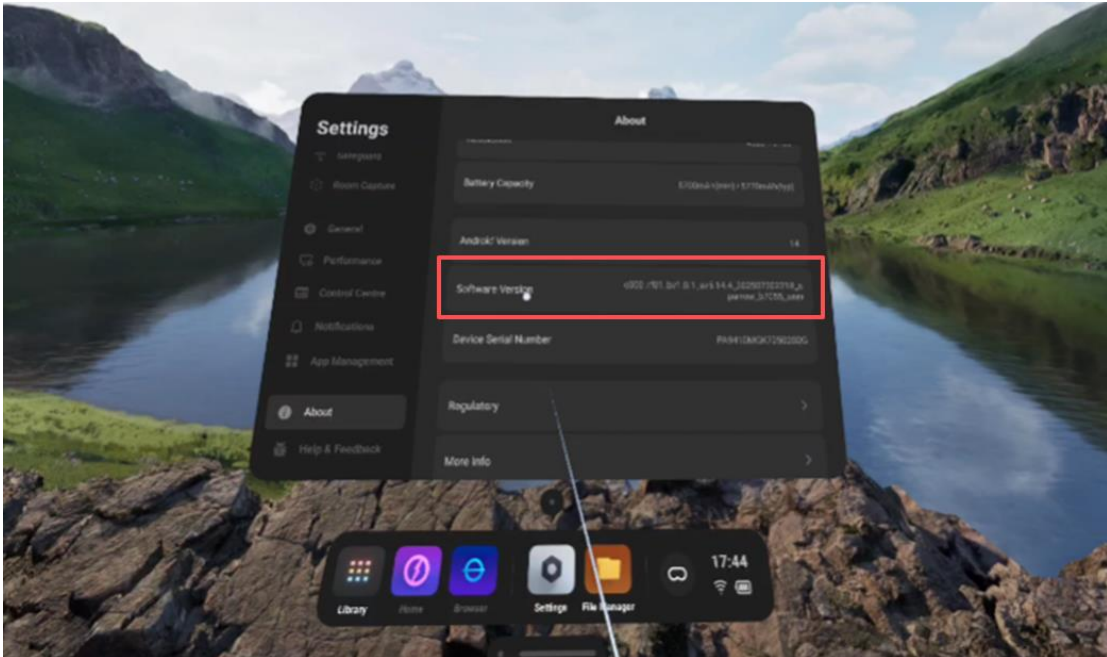

### 4 | Access Developer Options

A "Developer" option will now appear in the left-hand menu.

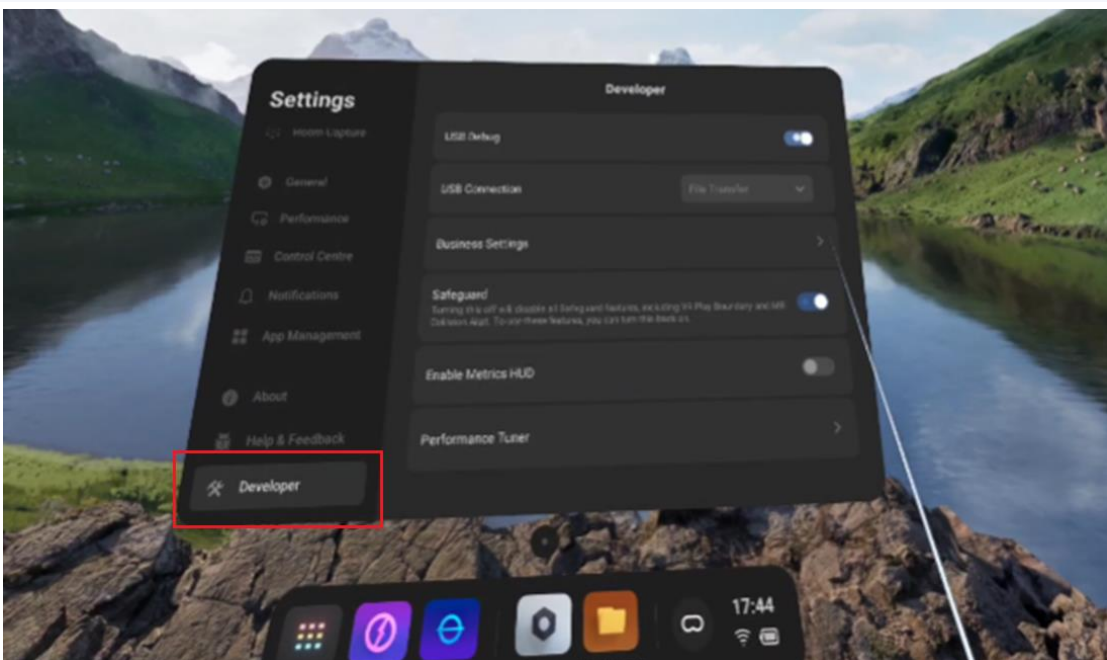

### 5 | Enable USB Debugging

Open "Developer Options" and switch on the "USB debugging" toggle to allow computer connection.



## 2 Install the APK File

### 1 Connect to a Computer

Use a USB-C cable to connect the Pico headset to your computer.

### 2 Transfer the APK File

- ▶ **On your computer:** Open "This Computer" and locate the PICO device in the file explorer.
- ▶ **Copy the file:** Drag and drop the A320 training software APK package into the headset's root directory or the "Download" folder.

### 3 Install on the Headset

- ▶ **Open File Manager:** Put on the headset and launch "File Manager."
- ▶ **Locate & install:** Find the APK file you copied, tap it, and confirm "Install" following the on-screen prompts.

**⚠ NOTE:** If the installation is blocked, ensure Developer Mode is fully enabled and USB Debugging is active. You may also need to allow installation from unknown sources in the settings.